

The information contained in this publication is the result of careful checking and reflects the latest information available prior to publishing. We reserve the express right to make structural amendments or changes.

防爆三相步进电机Exrdm 3913



ATTENTION

Please read the following description and connection instructions before installing this motor!

WARNING

To prevent ignition of hazardous atmosphere do not operate the motor in hazardous location with any securing screws or covers removed and do not remove any screws or cover while motor is in a hazardous location!

WARNING

The conduit seal must be listed for Class I, Zone 1, AExd IIC or Class I, Div. 1, Groups A, B, C, and D hazardous location!

ATTENTION

For supply connections, use cable rated for at least 90°C.

ATTENTION

The fuses and the stepping motor power drive must be installed outside of the explosion hazard area!

ATTENTION

The setted ratings of the power driver must not exceed the specified values for phase current, phase frequency and chopper voltage!

The new explosion-protected 3-phase stepping motor ExRDM 3913 excels with a robust design, high torque and small dimensions.

The motor is conform to protection type AEx d IIC T4.

The torque of the 3-phase stepping motor ExRDM 3913 is 5.8 Nm.

Power drives

The ExRDM 3913 3-phase stepping motor can be driven via a 325 V power drive for 3-phase stepping motors such as the WD3-004.

Operation Manual

The information contained in this publication is the result of careful checking and reflects the latest information available prior to publishing. We reserve the express right to make structural amendments or changes.

Specifications of the motor

ExRDM 3913 stepping motor

Number of steps z	200 to 10000
Step angle α	1.8° to 0.036°
Step accuracy non-cumulative ¹⁾ $\Delta\alpha_S$	$\pm 6'$
Max. torque M_m	5.80 Nm
Holding torque M_H	6.55 Nm
Moment of inertia of rotor J_R	3.3 kgcm ²
Max. starting frequency ¹⁾ f_{Aom}	5.3 kHz
Nominal current/winding I_W	1.6 A
Resistance/winding R_W	9.3 W
Time constant of current rise τ	~11 ms
Max. dynamic shaft load	axial ²⁾ ~60 N radial ~110 N
Weight	9.5 kg
Max. chopper voltage	325 V
Protection type	AEx d IIC T4
Ambient temperature	-20°C to 50°C


- 1) measured at 1,000 steps/revolution
 2) at half shaft length (from mounting flange), please inquire for different shaft loads

Characteristics for ExRDM3913 stepping motor

The following characteristics are shown:

- maximum operating torque
- start-stop characteristic
- moment of inertia of the load (start/stop operation)

For determining the characteristics, the motors were driven with the WD3-004. The phase current was set to 1.6 A, the number of steps to 1,000 steps/revolution.

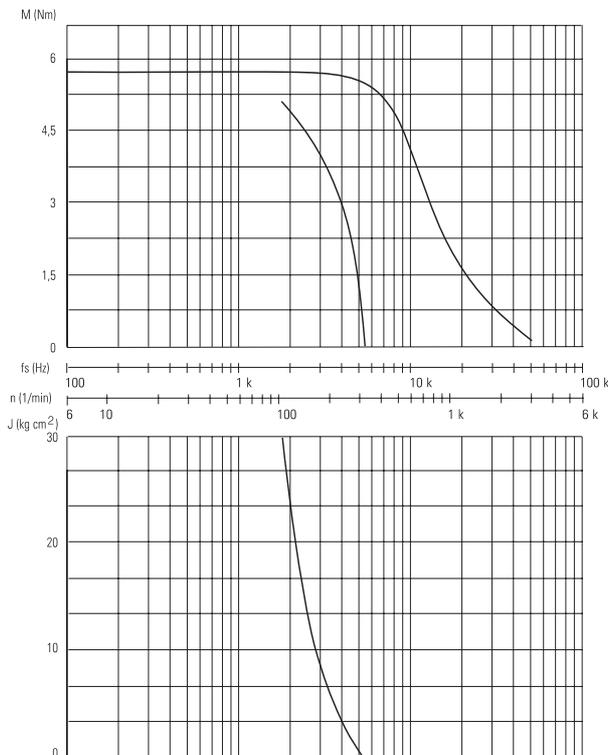

Motor ExRDM 3913 with PL 50/100 gearbox

The ExRDM 3-phase stepping motor can be equipped with the PL 50 gearbox.

The torque available during operation depends on the reduction ratio and on the efficiency of the gearbox. The table below shows the maximum torque and the moments of inertia of the gearbox.

Reduction	3:1	5:1	10:1
Max. torque ExRDM 3913 in Nm	14.8	24.6	41.9
Moment of inertia of gearbox in kgcm ²	0.33	0.21	0.16


The actual torque of the ExRDM 3913 3-phase stepping motor at a given driving frequency f_s must be determined on the basis of the torque characteristic. The moment of inertia of the gearbox must be added to the moment of inertia of the rotor and the external moment of inertia in order to determine the maximum start/stop frequencies on the basis of the start/stop characteristic.

Specifications of PL 50 / 100 gearbox


Gearbox type	planetary gearbox single-stage 3:1, 5:1 double-stage 10:1
Max. continuous load	50 Nm
Max. radial load	500 N
Max. axial load	250 N
Standard circumferential backlash	motor shaft / gearbox shaft < 15'
Standard reduction ratios	3:1, 5:1, 10:1
Efficiency	~ 0.85/stage
Housing material	aluminum
Surface	black eloxed
Shaft material	C 45
Bearing	roller bearings
Sealing at shaft	shaft sealing ring
Lubrication	life-time lubrication
Weight	3.3 kg

The information contained in this publication is the result of careful checking and reflects the latest information available prior to publishing. We reserve the express right to make structural amendments or changes.

Specifications of the motor

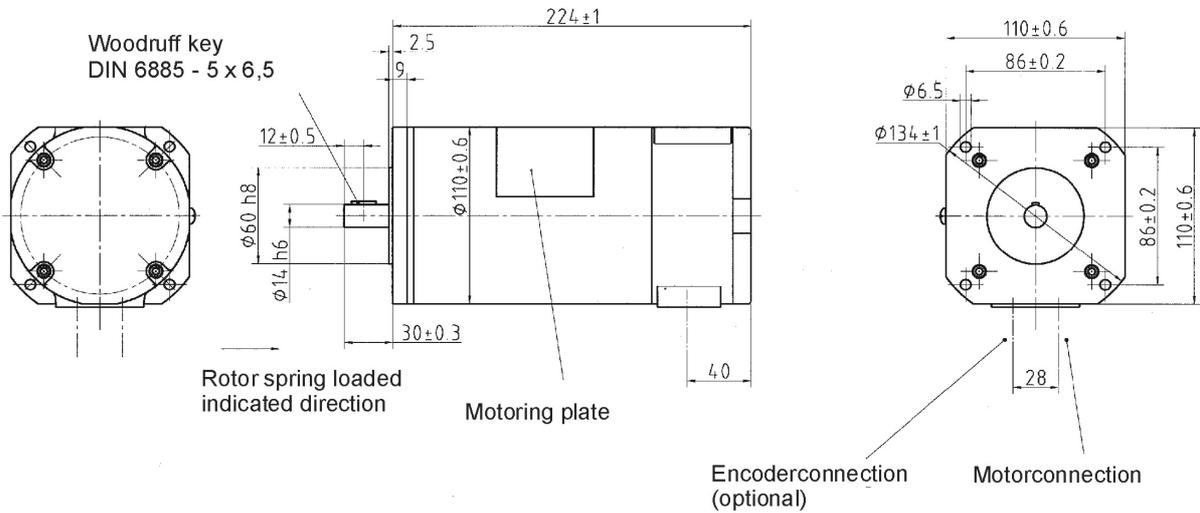

Dimensions of ExRDM 3931 3-phase stepping motor

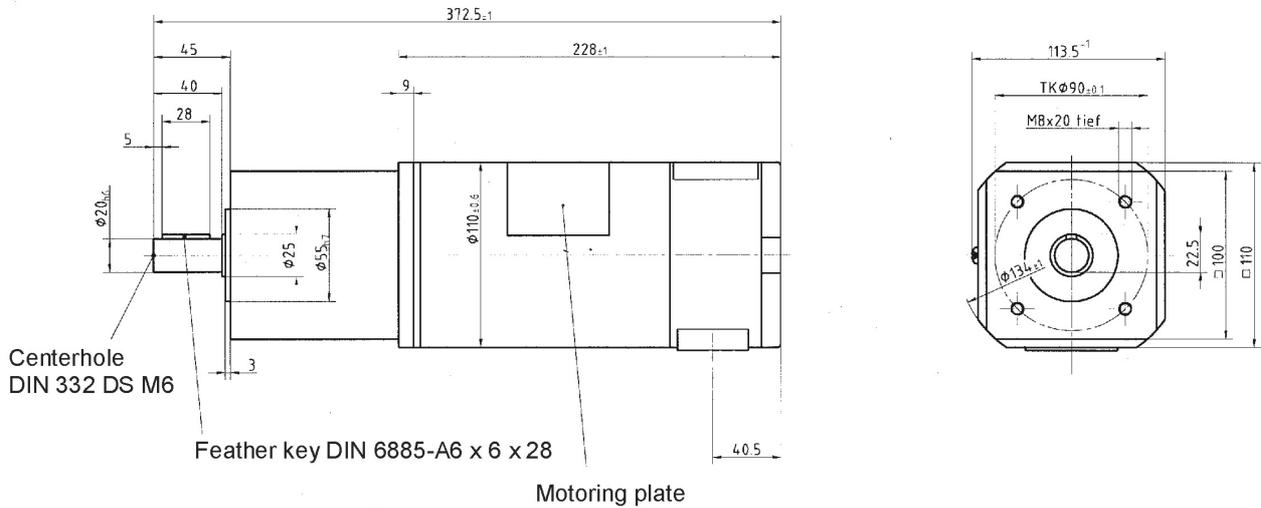

Dimensions of ExRDM 3931 3-phase stepping motor with Gearbox

Operation Manual

The information contained in this publication is the result of careful checking and reflects the latest information available prior to publishing. We reserve the express right to make structural amendments or changes.

Installation of the motor


ATTENTION

Please read the following instructions before installing this motor.

General safety instructions

- Do not disassemble the 3-phase stepping motor!
- A protective conductor with AWG 12 max. can be connected to the exterior terminal on the terminal box. The use of this terminal must be permitted by the local authority.
- Stepping motors heat up during operation. Provide for efficient heat dissipation. Caution when touching the motor!
- When pressing on a pinion, pulley or similar onto the motor shaft, pad the shaft from behind!
- The motor shall be connected through a conduit seal within 18 inches distance. Box and fittings shall be threaded for connection to conduit or cable termination and shall be explosionproof, listed for Class I, Division 1, Groups A, B, C, and D; or Class I, Zone 1, AEx d IIC. Threaded joint shall be made up with at least five threads fully engaged.

Wiring diagram

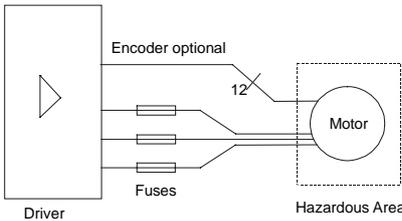


External fuses for the motors

Three fuses, 2.5 A, 250 V, breaking capacity H (=1500 A), must be inserted in the power supply cable to the explosion proof stepping motor ExRDM 3913.

ATTENTION


The fuses and the stepping motor power drive must be installed outside of the explosion hazard area.

Encoder signals

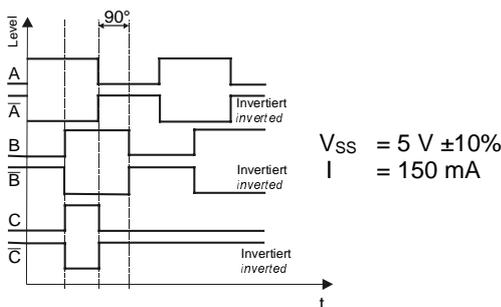

Wiring

1. Release the four Allen screws on the back of the motor and remove the cover of the terminal box.
2. Mount a conduit seal directly at the cable entry points.
3. Install the conduit system according the documentation of the manufacturer and screw the wires to the terminals on the motor PCB (see figure).

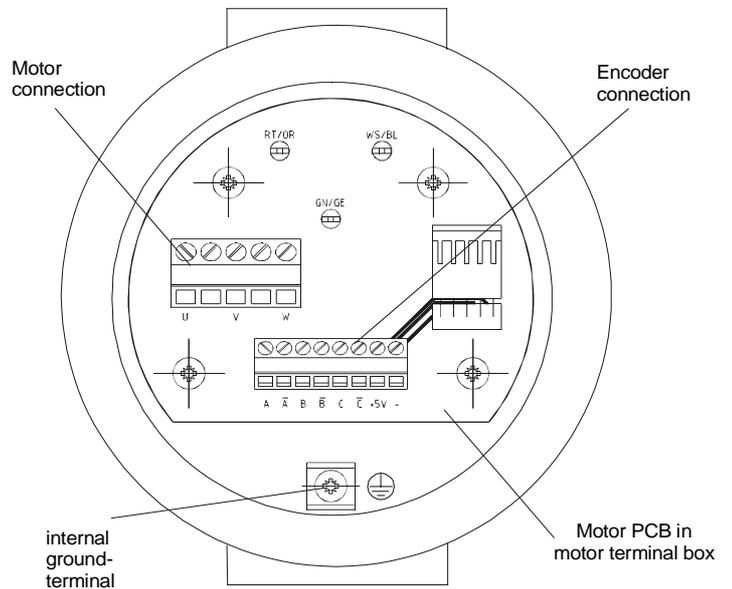

BERGERLAHR
motor cable

- U brown
- V blue
- W black
- ⊕ protective ground

BERGERLAHR
encoder cable



- A white
- A̅ brown
- B green
- B̅ yellow
- C grey
- C̅ pink
- +5V red
- 5VGND blue

The symbol ⊕ IEC earthground terminal marks terminal for equipment grounding.

Operation Manual

The information contained in this publication is the result of careful checking and reflects the latest information available prior to publishing. We reserve the express right to make structural amendments or changes.

Current-time diagram

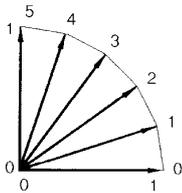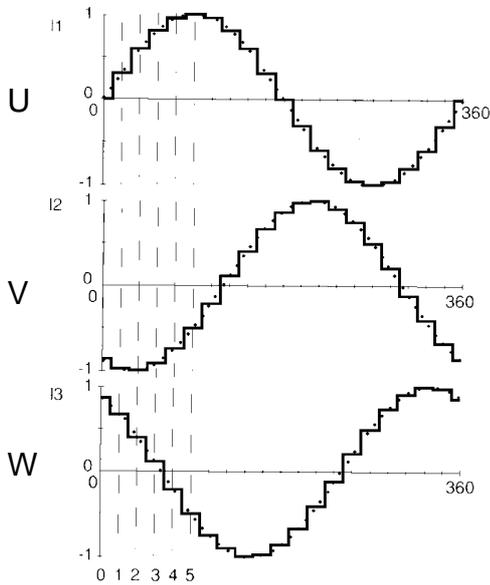

Ordering numbers

Stepping motor	Ordering number
without encoder, without gearbox ExRDM 3913/50 N UL 1,6A	520 510 460 00
with encoder, without gearbox ExRDM 3913/50 N Ei UL 1,6A	529 510 461 00
with gearbox, without encoder ExRDM 3913/50 N UL 1,6A PL50/100 3:1	530 510 460 02
ExRDM 3913/50 N UL 1,6A PL50/100 5:1	530 510 460 03
ExRDM 3913/50 N UL 1,6A PL50/100 10:1	530 510 460 09
with gearbox, with encoder ExRDM 3913/50 N Ei UL 1,6A PL50/100 3:1	539 510 461 02
ExRDM 3913/50 N Ei UL 1,6A PL50/100 5:1	539 510 461 03
ExRDM 3913/50 N Ei UL 1,6A PL50/100 10:1	539 510 461 09